


Upright and grand piano spare parts

picture	code	name
	812711151000	Agrafe without thread, pianettes 1
	812711161000	Agrafe without thread, pianettes 2
	812711121000	Agrafe without thread, with cradle, pianettes 2
	812711111000	Agrafe without thread, with cradle, pianettes 1
	812711131000	Agrafe without thread, with cradle, pianettes 3
	812721111000	Agrafe with thread, pianos 1
	812721121000	Agrafe with thread, pianos 2

Upright and grand piano spare parts

	812721131000	Agrafe with thread, pianos 3
	812721200001	Flap brake
	812711631000	Peg
	812719321030	Damper bar holder
	812712311220	Small pedal holder, left
	812712311120	Small pedal holder, right
	812712312120	Big pedal holder, left

Upright and grand piano spare parts

	812712312220	Big pedal holder, right
	812721801000	Safety holder, assembly
	812722121000	Piano cover holder with eye
	812722321010	Hook of piano cover holder with eye
	812712521040	Pedal hook
	742422765701 AP	Piano key
	742422765701 NOTE	Piano key

Upright and grand piano spare parts

	<p>812713271040 Cap glider, 32 mm diameter</p>
	<p>812722821000 Cap glider, 40 mm diameter</p>
	<p>812713233000 Boat glider</p>
	<p>812722982200 Piano wheel</p>
	<p>812722931000 Piano wheel, without brake</p>
	<p>812722921000 Piano wheel, with brake</p>
	<p>812722971000 Set - Brass grand castor with rubber</p>

Upright and grand piano spare parts

	812722951300	Grand castor cup
	812713441002	Pianette wheel (M 110)
	812713441000	Pianette wheel (M 120)
	812713441004	Pianette wheel (M 130)
	812723241002	AL stock
	812721200003	Cap
	812912001146	Hammer moulding bar, model 110

Upright and grand piano spare parts

	812912001147	Hammer moulding bar, model 120
	812163115422	Mechanics bar, model 110
	812163115423	Mechanics bar, model 120
	812714035501	Mechanics bar, model III
	812714045502	Mechanics bar, model IV
	812714035551	Base bar, model III
	812714045552	Base bar, model IV

Upright and grand piano spare parts

	812724231030	Spoon L=33,5, diameter 2,24 mm
	812713821030	Spoon L=38, diameter 2,24 mm
	812724441000	Collar
	812714371000	Keyboard leads – 12x12,5 mm
	812714321000	Keyboard leads – 12x6 mm
	812714331000	Keyboard leads – 12x8 mm
	812714341000	Keyboard leads 12 mm x 10 mm

Upright and grand piano spare parts

	812714581020	Pianette pedal, left
	812714583020	Pianette pedal, right
	812714585030	Middle pianette pedal with half-groove
	812724912603	Pedalizing assembly – pianos
	812725141000	Sliding spring
	812714900000	Lower frame spring
	812719010010	Lock metal sheet, key

Upright and grand piano spare parts

	742422765703	Lock metal sheet, key
	812721200002	Brake case
	812518100000	Semitone keys
	812726421030	Leg joint, model I
	812726421020	Leg joint, model II-V
	812726621100	Bar screw L=55 mm
	812726631100	Bar screw L=65 mm

Upright and grand piano spare parts

	812727581050	Screw of piano key filling
	812715531040	Bracket cap screw, screw diameter
	812715531030	Bracket cap screw, screw diameter
	812726833000	Lyre screw
	812715661040	Bowl screw, diameter 12x16 mm
	812715631040	Bowl screw, diameter 12x20 mm
	812725285551	Buttress screw, L=27 mm

Upright and grand piano spare parts

	812725242000	Buttress screw, L=30 mm
	812725285553	Buttress screw, L=33 mm
	812725242001	Buttress screw, L=34 mm
	742716211089	Fork screw, L=47, diameter 5 mm
	742716211104	Fork screw, L=53, diameter 5 mm
	812716231030	Fork screw, L=56, diameter 5 mm
	812716241030	Fork screw, L=58, diameter 5 mm

Upright and grand piano spare parts

	812717121030	Damper bar, L=1045 mm
	812717521020	Lifting angle
	812723831000	Music stand guide
	812728751060	Lyre angle brace, longer, model I-II
	812728741060	Lyre angle brace, longer, model III-V
	812728922120	Piano lock
	812714581012	Pianette pedal stop



Upright and grand piano spare parts

	812729109020	Piano push bolt
	812729222001	Brake hanger
	812729222002	Peg hanger
	812729531000	Hanger for piano sheet music stand
	812719431000	Music stand hanger
	812719451000	Music stand hanger
	549454077821	Long hinge

Upright and grand piano spare parts

	549454077812	Top lid long hinge
	812719562000	Pianette cover hanger
	812729471000	Cover hanger
	812729621000	Brace hanger
	812729722000	Bent plug contact
	812729722002	Direct plug contact

Upright and grand piano spare parts

	812722951300	Prop hinge
		Lifting rod